


DIY HOUSE NUMBERS WITH PLANTER BOX

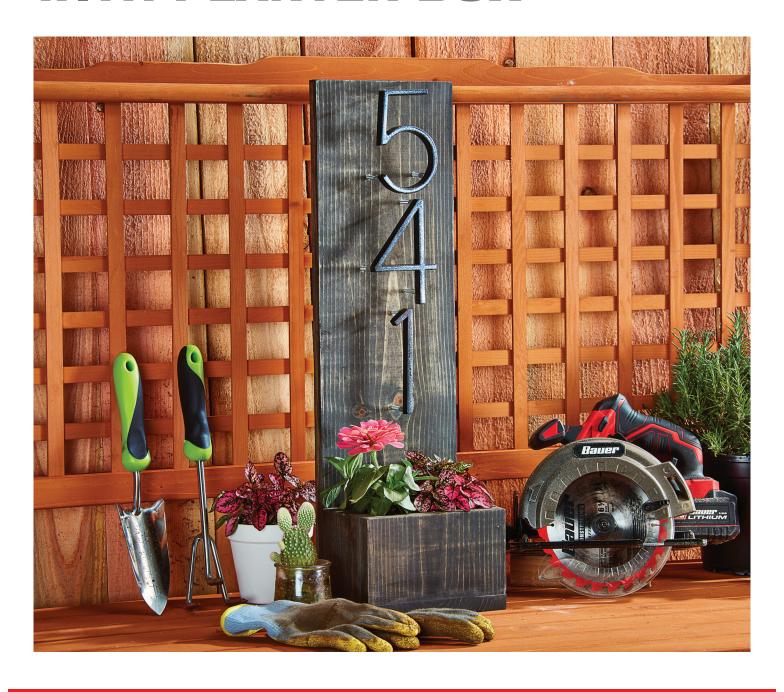



FOLLOW THESE STEPS:

- Using a 1" x 6" hardwood board, cut to your desired length. We recommend 25" for three numbers, and 30" for four numbers.
- 2. Using the rest of your 1" x 6", cut the pieces for the planter box. You will need:
 - a. (2) 4" x 4" pieces
 - b. (1) 4" x 7-1/2" piece
 - c. (1) 4"-3/4" x 7-1/2" piece
- Sand all of your wood pieces to have clean edges using a random orbital sander and 100 grit sandpaper.
- Using the Bauer Titanium Drill Bit Set (Item 63911), drill your pilot holes for assembly, spacing your holes 1-1/2" apart.
- Using 1-5/8" wood screws, assemble your wood pieces.
- Clean your assembled project and apply a stain if desired.
- Once your project has been stained and dried, install your house numbers using the specified instructions.
- 8. Mount the hardware that is appropriate for the material your project will be attaching to.

MATERIALS:

- 1. (1) 1" x 6" Hardwood Board
- 2. (1) Set of House Numbers of Your Choice
- 3. (1) Ot. of Exterior Wood Stain
- 4. 1-5/8" Wood Screws
- 5. Paint Brush for Stain

RECOMMENDED TOOLS:

- Bauer 20v HYPERMAX™ Lithium-Ion Cordless 6-1/2" Circular Saw (Item 63634)
- Bauer 20v HYPERMAX™ Lithium-Ion Cordless 5" Random Orbital Sander (Item 64943)
- 3. Bauer 20v HYPERMAX™ Lithium-Ion Cordless 1/2" Drill/Driver (Item 56725)
- Bauer 20v HYPERMAX™ Lithium-Ion
 3.0 Ah High Capacity Battery (Item 64816)
- 5. Bauer 20v HYPERMAX™ Lithium-Ion Rapid Charger (Item 63529)
- 6. Bauer Titanium Drill Bit Set, 21 Pc. (Item 63911)
- Bauer Impact Drill And Driver Bit Set, 35 Pc. (Item 63910)
- 8. Bauer 6-1/2 In. 24T Framing Circular Saw Blade (Item 63907)

House Numbers with Planter Box

Ring in spring and dress up the entrance to your home with a DIY House Numbers Project that includes a planter box. Guests will be impressed by your bright and welcoming entrance decor where you can boast your favorite seasonal flowers or succulents.

